


## 72/106A Servo Saver Assembly Instructions Sheet 7

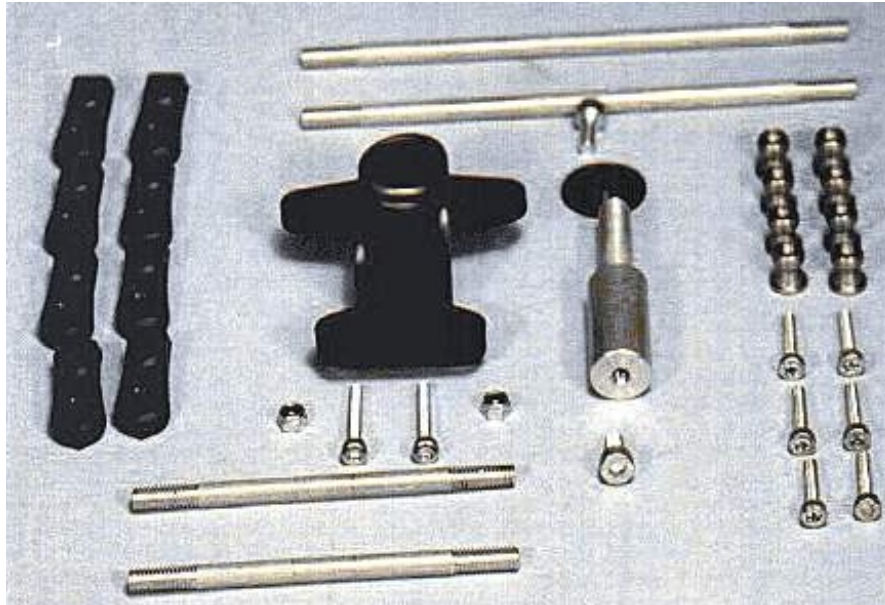

72/260	Servo Saver Pair of Mouldings
72/261	SS Spring
72/262	SS Post
72/263	SS Top Washer
72/214	Trunnion Moulding - 7mm Ball
72/213	Ball 7mm
72/267b	Track Rod - Axle
72/268	Push Rod - Servo
76/208	Trunnion Moulding - 10mm Ball
76/209	Ball 10mm
93/200	M3 Nylock Nut
93/216	M3 x 16mm Socket Cap Screw
93/220	M3 x 20mm Socket Cap Screw
94/200	M4 Nylock Nut
94/208	M4 x 8mm Socket Cap Screw
94/225	M4 x 25mm Socket Cap Screw



- 1). Assemble the two servo saver mouldings and spring as shown.
- 2). Fit to post with plastic top cap and M4 screw.
- 3). Assemble ball joints and fit to shafts.
- 4). Long shafts for servo, fit to servo saver with M3 x 16 screws self tapped into moulding. Put to one side for fitting with radio.
- 5). Fit track rods to underside of servo saver with M4 x 25 screws & Nuts.
- 6). Fit assembly to chassis.

