


## 80/100 Body & Bumper Mounting Assembly Instructions - Sheet 8

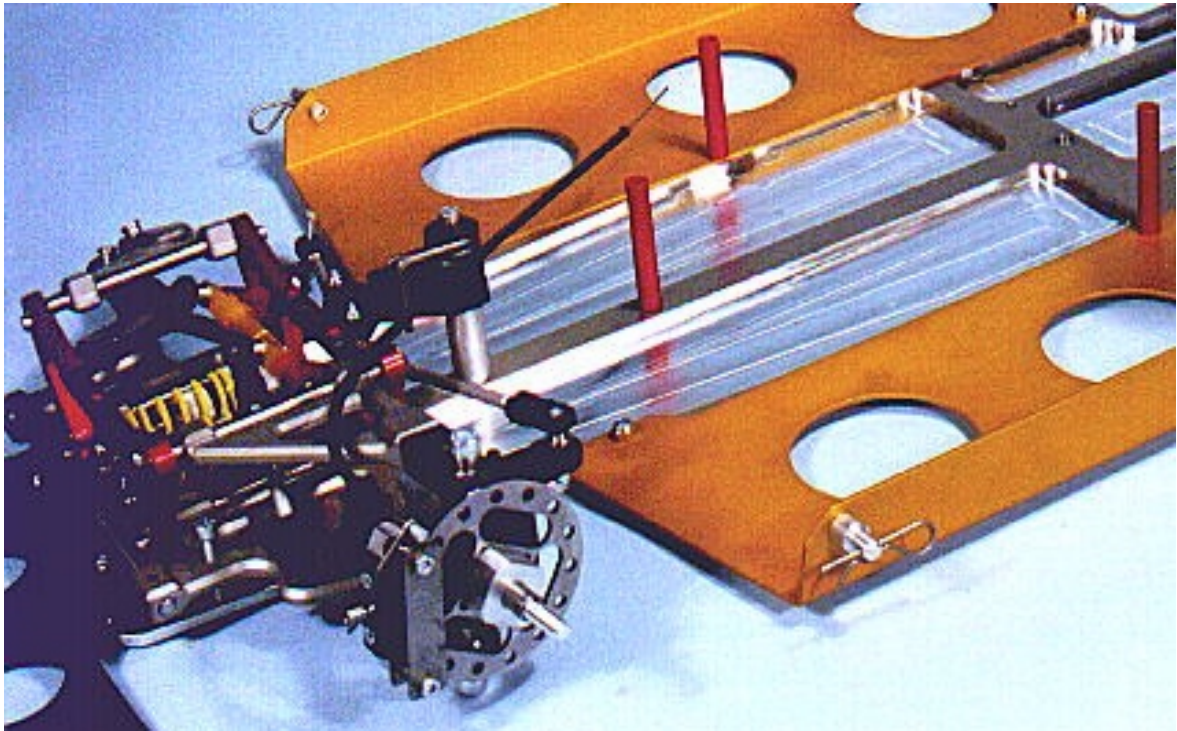

78/201	Mounting Post - Radio Plate
80/200	Body Mounting Rear Moulding
80/201b	Mounting Plate Rear - Truck
80/204	Bumper Foam Pad
80/207	Nerf Plate L.H. Body Mount
80/208	Nerf Plate R.H. Body Mount
80/209	Body Mounting Post - Side
80/211	Nylon Front Bumper
80/215	Body Spring Clip
94/200	M4 Nylock Nut
94/208	M4 x 8mm Socket Cap Screw
94/212	M4 x 12mm Socket Cap Screw
98/209	No4 x 3/8" Self Tapping Screw

- 1). Fit side body mounting posts to side plate.
- 2). Fit to chassis as shown using radio mounting posts and M4 nuts and bolts where shown.
- 3). Fit tank supports to tank and mount assembly to side plate (from pack 75/100).
- 4). Fit front bumper moulding.
- 5). When car is fully built, mount the body shell on its mountings and position bumper foam inside the front of the shell on top of the bumper.
- 6). Reshape if necessary and mark its position relative to the moulded bumper. Remove body shell and glue the foam to the bumper using contact adhesive.
- 7). Keep rear plates & moulding for later.